



Door and Window Alarm

This SCHWAIGER® door & window alarm is used to secure windows or doors, e.g. glass doors and sliding doors. As soon as the window or door is opened by an unauthorized person, an alarm sounds in order to discourage intruders. For this reason,

this product is perfect for securing any vulnerable point of entry. The alarm is activated and deactivated with an alarm key.



ARTICLE INFORMATION

Article Nr
EAN

HSA300 532
4004005019209



Last updated: 11.06.2017



(HSA300 532)

- alarm is triggered by separating the magnetic contacts
- loud deterrent alarm signal
- for securing windows, glass doors or sliding doors
- directly discourages intruders
- attracts attention of passers-by or people in the nearby area
- alarm is activated and deactivated with an alarm key
- batteries can be exchanged without having to demount the device
- very easy installation
- fixing by adhesive pad
- battery-operated (batteries included)
- content: alarm unit with 3 button cell batteries (LR44), magnetic contact, mounting material

TECHNICAL DATA

Point of use	indoor use
Mounting type	with adhesive pad
Volume	alarm signal 100 dB
Batteries	3x LR44
Power supply	via batteries
Material of product	plastic

Colour	white
Dimensions (width)	40 mm
Dimensions (height)	15 mm
Dimensions (depth)	65 mm
Packaging	clamshell SF

Last updated: 11.06.2017