



## Door and Window Alarm

with keypad

This SCHWAIGER® door and window alarm is used to secure windows or doors, e.g. sliding doors. As soon as the window or door is opened by an unauthorized person, an alarm sounds in order to discourage intruders. For this reason, this product is perfect for

securing any vulnerable point of entry. The alarm is activated / deactivated by entering a 4-digit PIN code.



### ARTICLE INFORMATION


Article Nr  
EAN

HSA400 532  
4004005019216



4 004005 019216

Last updated: 06.04.2017

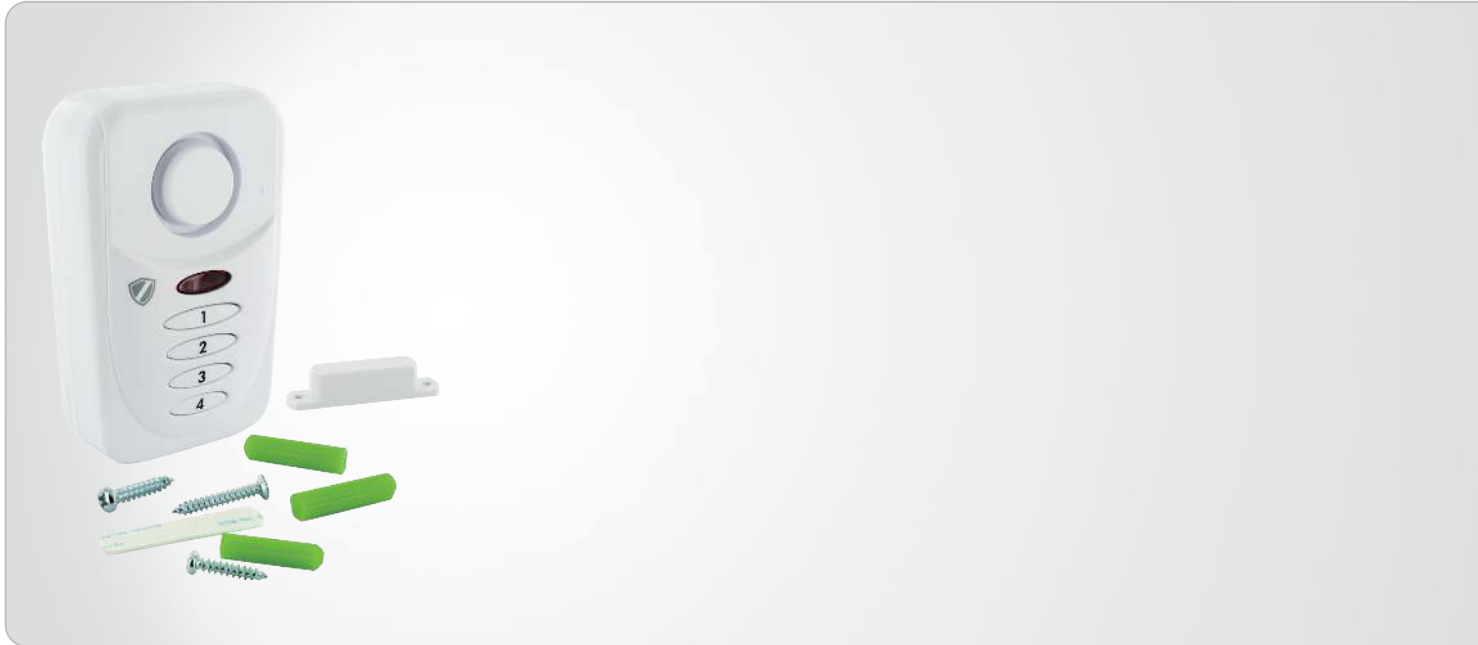

(HSA400 532)

- alarm is triggered by separating the magnetic contacts
- two different modes selectable - can be used as doorbell or alarm unit
- loud deterrent alarm signal
- for securing windows, glass doors or sliding doors
- directly discourages intruders
- attracts attention of passers-by or people in the nearby area
- alarm is activated and deactivated by entering a 4-digit PIN code
- PIN code can be customised
- delay function
- magnetic contact can be installed on either side of the alarm unit
- integrated status LED
- battery-operated (batteries not included)
- size of magnetic contact (WxHxD): 10 x 10 x 50 mm
- content: alarm unit, magnetic contact, mounting material

## TECHNICAL DATA

Point of use	indoor use
Mounting type	with adhesive pad/screws
Volume	alarm signal 120 dB
Batteries	3x LR03 (AAA)
Power supply	via batteries
Material of product	plastic

Colour	white
Dimensions (width)	65 mm
Dimensions (height)	25 mm
Dimensions (depth)	105 mm
Packaging	sealed blister SF

Last updated: 06.04.2017